Environm-EC91 Intrinsically Safe Oxygen Analyser stion Analysing

nentation

ency Ultraviolet Gas Production owdered Metals

d Environments

s Manufacturing Carbon Refining Food Packaging s ■ Glove Boxes on Beam ■ R & D ■ Fermentation d Environments Manufacturing ssel Blanketing tion Analysing ncy Ultraviolet Gas Production wdered Metals Environments anufacturing

el Blanketing

Ultraviolet s Production ered Metals

nufacturing n Refining

ove Boxes

m ■ R & D



Intrinsically Safe ATEX, unsurpassed certified oxygen analyser for all hazardous areas





Applications

Monitoring inert blanketing gas in oil and petrochemical applications

Inert gases and Hydrogen

Gas purity

Glove boxes

Oxygen deficiency monitoring

Metallurgy

Gas line monitoring

Features & Benefits

- Maintenance-free 5 year life sampling cell
- Unsurpassed safety protection
- Air calibration facility
- 3 year electronics warranty
- Certified for Zone 0

Environments Manufacturing sel Blanketing tion Analysing ncy Ultraviolet Gas Production owdered Metals d Environments Manufacturing carbon Refining Food Packaging ■ Glove Boxes n Beam ■ R & D Fermentation d Environments Manufacturing ssel Blanketing tion Analysing ncy Ultraviolet as Production vdered Metals nvironments anufacturing l Blanketing Production red Metals ufacturing n ■ R & D

Intrinsically Safe Oxygen Analysis


Systech Illinois have over 25 years of expertise in manufacturing gas analysers for the process industry and have an installed base of over a thousand instruments during this time. The EC91 Process Oxygen Transmitter will detect levels of oxygen as low as 1ppm, up to higher percent levels and can be used on most industrial gases and atmospheres. There is no need for routine maintenance of the fuel cell and the instrument can be easily calibrated, using ambient air or standard calibration samples.

The enclosure is manufactured from moulded glass fibre reinforced polyester, a material with high impact resistance. It will not be harmed by oils, common acids and alkalis, making it suitable for harsh environments. It is protected to IP66/Nema 4X. The EC91 transmits a 4-20mA signal which corresponds to the range of the analyser. Up to six ranges can be specified. A safe area digital indicator and alarm is available as an option.

Standard and custom designed sample systems are available on request. Sample gas may be piped directly to the instrument or remote cell assembly (also certified intrinsically safe). Sample pumps and aspirators are also available.

All the electronic circuits are intrinsically safe and have been certified to ATEX. The EC91 is approved for EEx ia IIC T4.

Installation

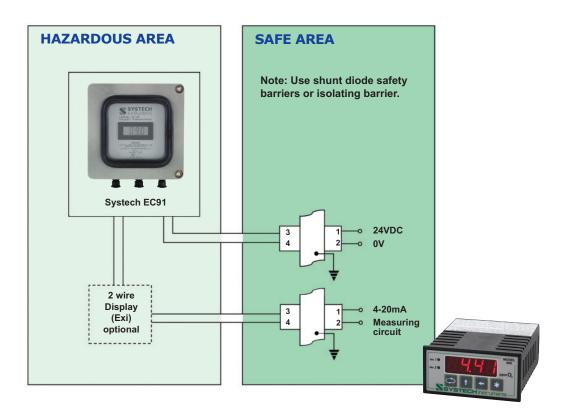

The sample pressure should be above 0.1 Bar. If not, a pump or aspirator should be fitted. Connection through the analyser is via a 1/8" tube fitting and a flow regulator should be used on the inlet. If required, dust filters or coalescing filters are available.

Standard or specially designed sample systems can also be supplied by Systech Illinois. Electrical installation must be made via appropriate safety barriers mounted in the safe area. A control room indicator and alarms can also be specified as an option.

Principle of Operation

The self-powered sensor has no moving parts and is integral to the sample chamber. This solves the problem of output changes due to a flow rate change, making the instrument extremely sensitive and quick to respond to changes in oxygen concentration.



Optional EC91 Remote Mounted Sensor (All Stainless Steel)

The sensor consists of an anode, electrolyte, and air cathode, together with a diffusion limiting capillary. The rate of diffusion is dependent upon the volume concentration of oxygen in the atmosphere or gas stream. At the cathode, oxygen is reduced to hydroxyl ions, which in turn oxidises the metal anode. The following overall reaction takes place:

 $2Pb + O_2 + 2H_2O \rightarrow 2Pb(OH)_2$

The sensor has a guaranteed operational life of six months. When monitoring low oxygen concentrations, or if the instrument is not in use, the expected lifetime is considerably longer. The sensor module is inexpensive and easy to replace.

Safety Protection

Gas analysis instrumentation for use in hazardous areas is commonly flame proof, explosion proof or intrinsically safe.

Flame proof or explosion proof instrumentation is designed to contain any event, in order to protect the close environment. This instrumentation is expensive and work permits are required in order to maintain the equipment and in some cases to calibrate it.

By contrast, intrinsically safe equipment is absolutely safe, by design. There is no risk of an event, since there is not enough energy stored or available in the circuits to cause an event. Work permits are not required.

Oxygen analysers in hazardous area applications demand the best protection. Intrinsically safe instruments certified to 'ib' cannot be installed in Zone 0 areas, as the measurement gas must enter the analyser. ATEX certified 'ia' analysers, such as the EC91 can only be used in Zone 0 areas to provide adequate safety protection.



Optional EC91 Barrier and Power Supply Box

ontact Leng inealing **=** V amics Comb Oxygen Defi s 🖿 High Puri Alloys and lity ■ Control I ■ Contact Le keting 🛮 Hyd n Analysing ass/Fibre Opt uction
Elect vdered Metal ity ■ Control ■ Contact Ler Annealing 🛢 🛚 ramics Comb Oxygen Defici High Purit Alloys and P ■ Controlled ontact Lens aling 🛮 Ves :s Combust n Deficien h Purity G and Pow ntrolled E g 📕 Food ■ Vesse

Technical Specifications

Ranges 6 selectable

0-20, 0-200, 0-2000 (ppm) 0-2%, 0-20%, 0-30%

Other ranges available on request

Resolution 0.05% of scale

Accuracy >10ppm ±2% of reading at 20°C

±5% of reading over temperature range

<10ppm ±2% of reading + 0.4ppm at 20°C

±5% of reading + 0.4ppm + 0.15ppm/°C

over temperature range

Response Time 90% of reading within 20 seconds
Calibration Range Ambient (20.9%) or certified gas

Measuring Cell Type Electrochemical fuel cell

Operating Conditions

Sample inlet pressure 0.1 to 1 Barg, up to 17 Barg with optional sample system

Sample flow rate 30ml/min to 5 ltr/min

Sample temperature 0 to 40°C

Ambient temperature 0 to 40°C, RH 0-99% non condensing

Sample connections 1/8" OD compression fitting

Power Requirements

Power supply 24Vdc via approved barrier mounted in the safe area

Power consumption 10W
Display Type Digital LCD
Analogue outputs Current: 4-20mA

Maximum loop resistance 400 Ohms

Cabinetry and Mounting

Enclosure Reinforced polyester Installation Wall mounted

Dimensions 200W x 200H x 175D (mm)

Weight 3kg

Ingress protection IP66, Nema 4X

Approvals ATEX 🖾 II 1G EEX ia IIC T4

Options Remote probe holder, Control room display, Aspirators,

Sample systems, Alarm outputs.

Local display Analogue in place of standard digital display

Sample pump For pressure below 0.1 Barg

Remote probes 1" NPT or BSP

Systech Illinois have over 25 years experience of providing analysis solutions for a wide range of industries. From our manufacturing plants in the UK and U.S we produce gas analysers for industrial process industries, headspace analysers for monitoring gas flushing of food products, and our range of permeation analysers.

Systech Instruments Ltd (UK) 17 Thame Park Business Centre,

Wenman Road, Thame, Oxfordshire OX9 3XA

Tel: +44 (0)1844 216838 Fax: +44 (0)1844 217220 E-mail: advice@systech.co.uk www.systechillinois.com Illinois Instruments, Inc (U.S)

2401 Hiller Ridge Road Johnsburg, Illinois 60051

U.S.A Tel: +1 815 344 6212

Tel: +1 815 344 6212 Fax: +1 815 344 6332

E-mail: sales@illinoisinstruments.com www.systechillinois.com

Illinois Instruments (Thailand)

6th fl Nopnarong Bldg No7 Ladprao23, Jatujak, Bangkok 10900

Thailand

Tel: +66 (0)2938 0798 Fax: +66 (0)2938 1058

E-mail: mai@illinoisinstruments.com www.systechillinois.com

Systech Illinois (China)

Room 519, No.3 FuCheng Building No. 900 Quyang Rd, Hongkou district, Shanghai, China 200434 Tel: +86 21 65533022

Fax: +86 21 65539651 Email: info@systechillinois.cn www.systechillinois.cn

Systech Illinois reserve the right to change specifications without notice. 09/2010

pellonned ontact Lens inealing **=** Ve amics Combu Oxygen Defici s 🖿 High Purity Alloys and p lity ■ Controlle ■ Contact Len keting ■ Hydro on Analysing **•** ass/Fibre Optio uction ■ Electr wdered Metals ity ■ Controlle ■ Contact Lens Annealing ■ Ve ramics Combus Oxygen Deficie High Purity Alloys and Por ■ Controlled ontact Lens M aling ■ Vess s Combustic n Deficiency h Purity Gas and Powd ntrolled Env t Lens Mar ydrocarbo g 📕 Food i